

How do I Adjust the clock in Vista Essentials?

For Vista with Essentials Rev 1.01.0016 and above, adjust the clock directly in Essentials Go to JOBS > PREFERENCES > GENERAL, click ADJUST CLOCK to change date/time settings.